



GT-100 ReleaseNote



Installing Your Downloaded Patches

© 2012 Roland Corporation U.S.
All rights reserved. No part of this publication may be reproduced in any form without the written permission of Roland Corporation U.S.

GT100RN02

About Loading Your Downloaded Patches

When you load your new patches into your GT-100, they replace your existing User patches in the GT-100's memory. Since you probably want to keep your User patches, here's how to safely store them on your computer using the Librarian application that came with your GT-100. You can then re-load them whenever you want.



If you've already got the GT-100 Librarian installed and set up, you can jump now to "Backing Up Your User Patches" on page 3.

Setting Up and Understanding the GT-100 Librarian


Installing and Configuring the Librarian

- 1 The GT-100's Librarian and driver software is available on the GT-100 Downloads tab at RolandUS.com. (Click [here](#).)
- 2 Download
 - *the GT-100 driver*—for your computer's operating system.
 - *the GT-100 Librarian*—for your computer's operating system.
- 3 Follow the included instructions to install the driver software.
- 4 Install the Librarian according to the included instructions.
- 5 Launch the Librarian.
- 6 Click the Setup menu, Set Up MIDI Devices...
- 7 Set the GT-100 as follows:
 - *Input*—GT-100
 - *Output*—GT-100


Understanding the Librarian

The Librarian has two types of windows:

- *the Main window*—shown below. The Main window exchanges patches with the GT-100.

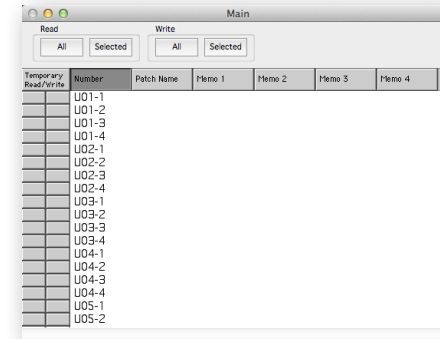

- *library windows*—that contain collections of patches, such as the window shown below. To get a patch or group of patches from a library into your GT-100, you must first copy them into the Librarian's Main window. To add patches to a library, you copy them from the Main window.

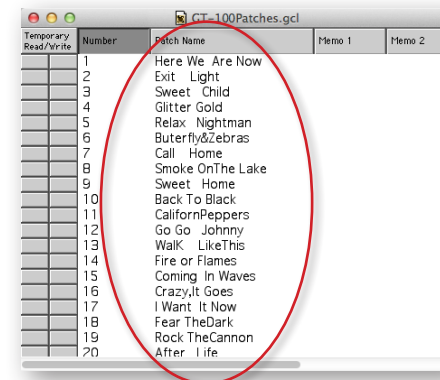


Library files have a ".m2l" file extension.

Backing Up Your User Patches

Now that you have the Librarian ready to go, here's how to back up your existing User patches and then load your newly downloaded patches.

- 1 At the top of the Main Librarian window, there are four boxes:



You can retrieve all of the patches in the GT-100's User bank for storage, or just the desired patches.

- 2 To grab
 - *all of the patches in the User bank*—click Read All.
 - *specific patches*—command-click (Mac) or control-click (Windows) the patches you want and click Read Selected.
- 3 After the data's been retrieved from the GT-100, select **Duplicate** from the Librarian's File menu—the Librarian creates a new library window that contains all of the patches you grabbed from the GT-100.
- 4 Select **Save As...** from the file menu and select a location on your computer's hard drive in which to store your User patches.



Library files have a ".m2l" file extension.

In the future, you can open this library and add or remove patches to keep all of your GT-100 patches stored in an order that makes sense to you.

You can return patches to the GT-100's memory by

- 1 opening the library
- 2 copying the desired patches into the Main Librarian window
- 3 sending them back to the GT-100 using the Write All or Write Selected buttons at the top of the Main window.

Loading Your Downloaded Patches Into the GT-100

- 1 Open one of the new GT-100 library files you downloaded.
- 2 Copy and paste its patches into the Librarian's Main window.
- 3 Click on Write All—or select only the desired new patches, and then click on Write Selected—to load the patches into the GT-100's User memory.